
EKI7553BTW EKI7553BTX

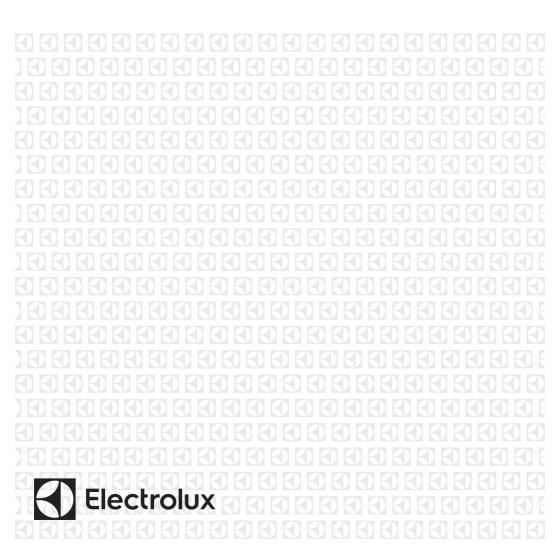

EN	Cooker	User Manual



# **CONTENTS**

1. SAFETY INFORMATION	3
2. SAFETY INSTRUCTIONS	
3. INSTALLATION	8
4. PRODUCT DESCRIPTION	9
5. BEFORE FIRST USE	10
6. HOB - DAILY USE	11
7. HOB - HINTS AND TIPS	15
8. HOB - CARE AND CLEANING	17
9. OVEN - DAILY USE	18
10. OVEN - CLOCK FUNCTIONS	21
11. OVEN - HINTS AND TIPS	22
12. OVEN - CARE AND CLEANING	34
13. TROUBLESHOOTING	37
14. FNFRGY FFFICIENCY	39

## WE'RE THINKING OF YOU

Thank you for purchasing an Electrolux appliance. You've chosen a product that brings with it decades of professional experience and innovation. Ingenious and stylish, it has been designed with you in mind. So whenever you use it, you can be safe in the knowledge that you'll get great results every time. Welcome to Electrolux.

#### Visit our website to:



Get usage advice, brochures, trouble shooter, service and repair information: www.electrolux.com/support



Register your product for better service:

www.registerelectrolux.com



Buy Accessories, Consumables and Original spare parts for your appliance: www.electrolux.com/shop

# CUSTOMER CARE AND SERVICE

Always use original spare parts.

When contacting our Authorised Service Centre, ensure that you have the following data available: Model, PNC, Serial Number.

The information can be found on the rating plate.

⚠ Warning / Caution-Safety information

(i) General information and tips

Environmental information

Subject to change without notice.

# 1. A SAFETY INFORMATION

Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible for any injuries or damage that are the result of incorrect installation or usage. Always keep the instructions in a safe and accessible location for future reference.

# 1.1 Children and vulnerable people safety



#### WARNING!

Risk of suffocation, injury or permanent disability.

- This appliance can be used by children aged from 8
  years and above and persons with reduced physical,
  sensory or mental capabilities or lack of experience
  and knowledge if they have been given supervision or
  instruction concerning the use of the appliance in a
  safe way and understand the hazards involved.
- Children between 3 and 8 years of age and persons with very extensive and complex disabilities shall be kept away from the appliance unless continuously supervised.
- Children of less than 3 years of age should be kept away from the appliance unless continuously supervised.
- Do not let children play with the appliance.
- Keep all packaging away from children and dispose of it appropriately.
- WARNING: Keep children and pets away from the appliance when it operates or when it cools down. Accessible parts become hot during use.
- If the appliance has a child safety device, it should be activated.
- Children shall not carry out cleaning and user maintenance of the appliance without supervision.

# 1.2 General Safety

- Only a qualified person must install this appliance and replace the cable.
- This appliance is intended for use up to an altitude of 2000 m above sea level.
- This appliance is not intended to be used on ships, boats or vessels.
- Do not install the appliance behind a decorative door in order to avoid overheating.
- Do not install the appliance on a platform.
- Do not operate the appliance by means of an external timer or separate remote-control system.
- WARNING: Unattended cooking on a hob with fat or oil can be dangerous and may result in fire.
- NEVER try to extinguish a fire with water, but switch off the appliance and then cover flame e.g. with a lid or a fire blanket.
- CAUTION: The cooking process has to be supervised.
   A short term cooking process has to be supervised continuously.
- WARNING: Danger of fire: Do not store items on the cooking surfaces.
- Do not use a steam cleaner to clean the appliance.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the glass door or the glass of hinged lids of the hob since they can scratch the surface, which may result in shattering of the glass.
- Metallic objects such as knives, forks, spoons and lids should not be placed on the hob surface since they can get hot.
- If the glass ceramic surface / glass surface is cracked, switch off the appliance and unplug it from the mains.
   In case the appliance is connected to the mains directly using junction box, remove the fuse to disconnect the appliance from power supply. In either case contact the Authorised Service Centre.

- After use, switch off the hob element by its control and do not rely on the pan detector.
- WARNING: The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements.
- Always use oven gloves to remove or put in accessories or ovenware.
- Before maintenance, cut the power supply.
- WARNING: Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.
- If the mains power supply cable is damaged, it must be replaced by the manufacturer, its Authorised Service Centre or similarly qualified persons to avoid an electrical hazard.
- Use only the food sensor (core temperature sensor) recommended for this appliance.
- Be careful when you touch the storage drawer. It can get hot.
- To remove the shelf supports first pull the front of the shelf support and then the rear end away from the side walls. Install the shelf supports in the opposite sequence.
- WARNING: Use only hob guards designed by the manufacturer of the cooking appliance or indicated by the manufacturer of the appliance in the instructions for use as suitable or hob guards incorporated in the appliance. The use of inappropriate guards can cause accidents.

# 2. SAFETY INSTRUCTIONS

### 2.1 Installation



#### WARNING!

Only a qualified person must install this appliance.

- · Remove all the packaging.
- Do not install or use a damaged appliance.

- Follow the installation instructions supplied with the appliance.
- Always take care when moving the appliance as it is heavy. Always use safety gloves and enclosed footwear.
- Do not pull the appliance by the handle.
- The kitchen cabinet and the recess must have suitable dimensions.

- Keep the minimum distance from other appliances and units.
- Install the appliance in a safe and suitable place that meets installation requirements.
- Parts of the appliance carry current.
   Close the appliance with furniture to prevent touching the dangerous parts.
- The sides of the appliance must stay next to appliances or units with the same height.
- Do not install the appliance adjacent to a door or under a window. This prevents hot cookware to fall from the appliance when the door or the window is opened.
- Make sure to install a stabilizing means in order to prevent tipping of the appliance. Refer to Installation chapter.

### 2.2 Electrical Connection



#### WARNING!

Risk of fire and electric shock.

- All electrical connections should be made by a qualified electrician.
- The appliance must be earthed.
- Make sure that the parameters on the rating plate are compatible with the electrical ratings of the mains power supply.
- Always use a correctly installed shockproof socket.
- Do not use multi-plug adapters and extension cables.
- Do not let mains cables touch or come near the appliance door or the niche below the appliance, especially when it operates or the door is hot.
- The shock protection of live and insulated parts must be fastened in such a way that it cannot be removed without tools.
- Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation.
- If the mains socket is loose, do not connect the mains plug.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.

- Use only correct isolation devices: line protecting cut-outs, fuses (screw type fuses removed from the holder), earth leakage trips and contactors.
- The electrical installation must have an isolation device which lets you disconnect the appliance from the mains at all poles. The isolation device must have a contact opening width of minimum 3 mm.
- Fully close the appliance door before you connect the mains plug to the mains socket.

## **2.3** Use



### WARNING!

Risk of injury and burns. Risk of electrical shock.

- This appliance is for household use only.
- Do not change the specification of this appliance.
- Make sure that the ventilation openings are not blocked.
- Do not let the appliance stay unattended during operation.
- Deactivate the appliance after each use.
- Be careful when you open the appliance door while the appliance is in operation. Hot air can release.
- Do not operate the appliance with wet hands or when it has contact with water.
- Do not use the appliance as a work surface or as a storage surface.
- Users with a pacemaker must keep a distance of minimum 30 cm from the induction cooking zones when the appliance is in operation.



### 

Risk of fire and explosion

- Fats and oil when heated can release flammable vapours. Keep flames or heated objects away from fats and oils when you cook with them.
- The vapours that very hot oil releases can cause spontaneous combustion.
- Used oil, that can contain food remnants, can cause fire at a lower temperature than oil used for the first time.

- Do not put flammable products or items that are wet with flammable products in, near or on the appliance.
- Do not let sparks or open flames to come in contact with the appliance when you open the door.
- Open the appliance door carefully. The use of ingredients with alcohol can cause a mixture of alcohol and air



#### WARNING!

Risk of damage to the appliance.

- To prevent damage or discoloration to the enamel:
  - do not put ovenware or other objects in the appliance directly on the bottom.
  - do not put aluminium foil on the appliance or directly on the bottom of cavity.
  - do not put water directly into the hot appliance.
  - do not keep moist dishes and food in the appliance after you finish the cooking.
  - be careful when you remove or install the accessories.
- Discoloration of the enamel or stainless steel has no effect on the performance of the appliance.
- Use a deep pan for moist cakes. Fruit juices cause stains that can be permanent.
- Do not keep hot cookware on the control panel.
- · Do not let cookware boil dry.
- Be careful not to let objects or cookware fall on the appliance. The surface can be damaged.
- Do not activate the cooking zones with empty cookware or without cookware.
- Cookware made of cast iron, aluminium or with a damaged bottom can cause scratches. Always lift these objects up when you have to move them on the cooking surface.
- This appliance is for cooking purposes only. It must not be used for other purposes, for example room heating.

# 2.4 Care and Cleaning



#### WARNING!

Risk of injury, fire, or damage to the appliance.

- Before maintenance, deactivate the appliance.
   Disconnect the mains plug from the mains socket.
- Make sure the appliance is cold.
   There is the risk that the glass panels can break.
- Replace immediately the door glass panels when they are damaged.
   Contact the Authorised Service
   Centre.
- Be careful when you remove the door from the appliance. The door is heavy!
- Fat and food remaining in the appliance can cause fire.
- Clean regularly the appliance to prevent the deterioration of the surface material.
- Make sure the cavity and the door are wiped dry after each use. Steam produced during the operation of the appliance condensates on cavity walls and can cause corrosion. To decrease the condensation operate the appliance for 10 minutes before cooking.
- Clean the appliance with a moist soft cloth. Use only neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects.
- If you use an oven spray, follow the safety instructions on the packaging.
- Do not clean the catalytic enamel (if applicable) with any kind of detergent.

# 2.5 Internal lighting



#### **WARNING!**

Risk of electric shock.

- The type of light bulb or halogen lamp used for this appliance is for household appliances only. Do not use it for house lighting.
- Before replacing the lamp, disconnect the appliance from the power supply.
- Use only lamps with the same specifications.

### 2.6 Service

- To repair the appliance contact the Authorised Service Centre.
- · Use original spare parts only.

# 2.7 Disposal



WARNING!

Risk of injury or suffocation.

# 3. INSTALLATION



### **WARNING!**

Refer to Safety chapters.

## 3.1 Technical data

Dimensions	
Height	850 - 936 mm
Width	696 mm
Depth	600 mm

### 3.2 Electrical installation



#### **WARNING!**


The manufacturer is not responsible if you do not follow the safety precautions from Safety chapters.

This appliance is supplied with a main plug and a main cable.



#### WARNING!

The power cable must not touch the part of the appliance shaded in the illustration.

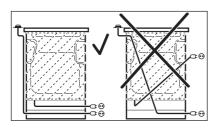

- Disconnect the appliance from the mains supply.
- Cut off the mains electrical cable close to the appliance and dispose of it.
- Remove the door catch to prevent children or pets from becoming trapped in the appliance.

# 3.3 Anti-tilt protection



#### **CAUTION!**

Install the anti-tilt protection to prevent the appliance from falling under incorrect loads. The anti-tilt protection only works when the appliance is put in a correct area.

Your appliance has the symbols shown on the pictures (if applicable) to remind you about the installation of the anti-tilt protection.






(i)

Make sure you install the anti-tilt protection at the correct height.

For more information about the installation of the appliance refer to a separate installation booklet


## 4. PRODUCT DESCRIPTION

## 4.1 General overview

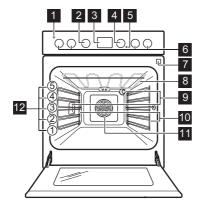

- 1 Power lamp / symbol
- 2 Knob for the oven functions
- 3 Display
- 4 Knob for the temperature
- 5 Temperature indicator / symbol
- 6 Knobs for the hob
- 7 Socket for the core temperature sensor
- 8 Heating element
- 9 Lamp
- 10 Shelf support, removable
- 11 Fan
- 12 Shelf positions

### 4.2 Hob overview

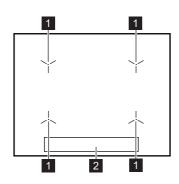

- 1. Induction cooking zone
- 2. Control Panel

## 4.3 Accessories

- Wire shelf
  - For cookware, cake tins, roasts.
- Baking tray
  - For cakes and biscuits.
- · Grill- / Roasting pan

To bake and roast or as pan to collect fat.

Food sensor

To measure how far the food is cooked.

· Storage drawer

The storage drawer is below the oven cavity.

# 5. BEFORE FIRST USE



#### WARNING!

Refer to Safety chapters.

## 5.1 Initial Cleaning

Remove all accessories and removable shelf supports from the oven.

Refer to "Care and cleaning" chapter.

Clean the oven and the accessories before the first use.

Put the accessories and the removable shelf supports back to their initial position.

## **5.2** Using the sensor fields

To activate the function press and hold the selected symbol on the display for at least 1 second.

## 5.3 Setting the time

You must set the time before you operate the oven.

The 🕘 flashes when you connect the appliance to the electrical supply, when there was a power cut or when the timer is not set.

Press the + or - to set the correct time.

After approximately five seconds, the flashing stops and the display shows the time of day you set.

# 5.4 Changing the time



You cannot change the time of day if the Duration |→| function operates.

Press again and again until the indicator for the Time of Day function flashes.

To set a new time, refer to "Setting the time".

# 5.5 Preheating

Preheat the empty oven before first use.

 
- 1. Set the function . Set the maximum temperature.
- 2. Let the oven operate for 1 hour.
- 3. Set the function . Set the maximum temperature.
- 4. Let the oven operate for 15 minutes.
- 5. Set the function . Set the maximum temperature.
- **6.** Let the oven operate for 15 minutes.
- Turn off the oven and let it cool down.

Accessories can become hotter than usual. The oven can emit an odour and smoke. Make sure that the airflow in the room is sufficient.

# **5.6** Opening and closing the door with the mechanical door lock

The mechanical door lock is activated by default.


To open the door move the lock to the right.



Close the door without pressing the lever.


# **5.7** Deactivating the mechanical door lock - in the main oven

  Press the door trim B at each side. The seal releases.




2. Pull the door trim up and remove it.

 **3.** Remove the lever 1, move it to the right 2 and put it back in.



4. Hold the door trim B at each side and position it on the inner edge of the door. Put the door trim into the top edge of the door.

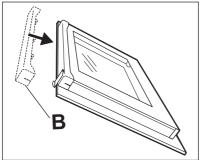

### Activating the mechanical door lock

Do the above procedure again and move the lever back to the left.



Deactivating the appliance does not deactivate the mechanical door lock.


# 6. HOB - DAILY USE



## WARNING!

Refer to Safety chapters.

# **6.1** Hob control panel

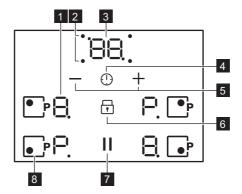

Use the sensor fields to operate the appliance. The displays, indicators and sounds tell which functions operate.

	Sen- sor field	Function	Comment
1	-	Heat setting display	To show the heat setting.
2	-	Timer indicators of cooking zones	To show for which zone you set the time.
3	-	Timer display	To show the time in minutes.
4	①	-	To select the cooking zone.
5	<del>+</del> /	-	To increase or decrease the time.
6	7	Lock / Child Safety Device	To lock / unlock the control panel.
7	П	Pause	To activate and deactivate the function.
8	<b>₽</b>	PowerBoost	To activate and deactivate the function.

# 6.2 Heat setting displays

Display	Description
0	The cooking zone is deactivated.
1-9/2-6	The cooking zone operates. The dot means a change by half of a heating level.
U	Pause operates.
R	Automatic Heat Up operates.
P	PowerBoost operates.
E + digit	There is a malfunction.
=/=/_	OptiHeat Control (3 step Residual heat indicator): continue cooking / keep warm / residual heat.
L	Lock / Child Safety Device operates.
F	Incorrect or too small cookware or no cookware on the cooking zone.
-	Automatic Switch Off operates.

# **6.3** OptiHeat Control (3 step Residual heat indicator)

,	٨	
/	Ļ	/
$\sim$	•	_

## WARNING!

There is a risk of burns from residual heat.

The indicators show the level of the residual heat for the cooking zones you are currently using. The indicators may also come on for the neighbouring cooking zones even if you are not using them

The induction cooking zones produce the heat necessary for the cooking process directly in the bottom of the cookware. The glass ceramic is heated by the heat of the cookware.

## 6.4 The heat setting

Turn the knob for the heating functions to select a heating function. To deactivate it turn the knob to the off position  $\mathbf{0}$ .

### **6.5** Automatic Switch Off

# The function deactivates the hob automatically if:

- all cooking zones are deactivated,
- you do not set the heat setting after you activate the hob,
- you spill something or put something on the control panel for more than 10 seconds (a pan, a cloth, etc.). An acoustic signal sounds and the hob deactivates. Remove the object or clean the control panel.
- the hob gets too hot (e.g. when a saucepan boils dry). Let the cooking zone cool down before you use the hob again.
- you use incorrect cookware. The symbol comes on and the cooking zone deactivates automatically after 2 minutes.
- you do not deactivate a cooking zone or change the heat setting. After some time comes on and the hob deactivates.

The relation between the heat setting and the time after which the hob deactivates:

Heat setting	The hob deactivates after
<u>u</u> , 1 - 2	6 hours
3 - 4	5 hours
5	4 hours
6 - 9	1.5 hour

# 6.6 Automatic Heat Up

If you activate this function you can get a necessary heat setting faster. The function sets the highest heat setting for some time and then decreases to the correct heat setting.



To activate the function a cooking zone must be cold.

To activate the function for a cooking zone: turn the knob for a cooking zone to the A position. 

R

shows on the display. Immediately set the correct heat setting.

**To deactivate the function:** turn the knob to the off position.

#### **6.7** PowerBoost

This function makes more power available to the induction cooking zones. The function can be activated for the induction cooking zone only for a limited period of time. After this time the induction cooking zone automatically sets back to the highest heat setting.

To activate the function for a cooking zone: touch P. P comes on.

To deactivate the function: change the heat setting.

#### 6.8 Timer

#### Count Down Timer

You can use this function to set how long the cooking zone should operate for a single cooking session.

First set the heat setting for the cooking zone then set the function.

To set the cooking zone: touch (!) again and again until the indicator of a necessary cooking zone comes on.

To activate the function: touch + of the timer to set the time (00 - 99 minutes). When the indicator of the cooking zone starts to flash slowly the time counts down.

To see the remaining time: set the cooking zone with ①. The indicator of the cooking zone starts to flash quickly. The display shows the remaining time.

To change the time: set the cooking zone with ①. Touch + or -.

To deactivate the function: set the cooking zone with and touch. The remaining time counts back to 00. The indicator of the cooking zone goes out.



When the time comes to an end, the sound operates and 00 flashes. The cooking zone deactivates.

To stop the sound: touch .

### CountUp Timer

You can use this function to monitor how long the cooking zone operates.

To set the cooking zone: touch (1) again and again until the indicator of a necessary cooking zone comes on.

To activate the function: touch — of the timer. UP comes on. When the indicator of the cooking zone starts to flash slowly the time counts up. The display switches between UP and counted time (minutes).

To see how long the cooking zone

**operates:** set the cooking zone with ①. The indicator of the cooking zone starts to flash quickly. The display shows how long the zone operates.

To deactivate the function: set the cooking zone with ① and touch 🕂 or —. The indicator of the cooking zone goes out.

#### **Minute Minder**

You can use this function as a **Minute Minder** when the hob is activated and the cooking zones do not operate. The heat setting display shows [1].

To activate the function: touch .

Touch + or - of the timer to set the time. Cooking zones display deactivates automatically after 10 seconds. When the time comes to an end, the sound operates and **00** flashes.

To stop the sound: touch ①.

To deactivate the function: activate for a short time and deactivate left front cooking zone.



The function has no effect on the operation of the cooking zones.

## 6.9 Pause

The function does not stop the timer functions.

Touch I to activate the function.

comes on. The heat setting is lowered to 1.

To deactivate the function, touch  $\parallel$ . The previous heat setting comes on.



If you change the heat setting, the function stops and the display shows the new heat setting.

## **6.10** Lock

You can lock the sensors on the hob while cooking zones operate.

Set the heat setting first.

To activate the function: touch . L comes on for 4 seconds. The Timer stays on.

To deactivate the function: touch .

The previous heat setting comes on.



When you deactivate the hob, you also deactivate this function.

## 6.11 Child Safety Device

This function prevents an accidental operation of the hob.

To activate the function: the hob must be deactivated. Touch for 4 seconds until flashes. Touch comes on for 4 seconds.

To deactivate the function: the hob must be deactivated. Touch for 4 seconds until flashes. Touch for 4 seconds.

To override the function for only one cooking time: activate a cooking zone. Comes on. Touch for 4 seconds until comes on for all zones. Set the heat setting in 4 seconds. You can operate the hob. When you deactivate the appliance the function operates again.

# **6.12** OffSound Control (Deactivation and activation of the sounds)

Deactivate the hob. Touch for 3 seconds. Touch for 3 seconds. or seconds. or fitness on. Touch for the timer to choose one of the following:

- b the sounds are off
- 🛅 the sounds are on.

To confirm your selection wait until the hob deactivates automatically.

When the function is set to by you can hear the sounds only when:

## 7. HOB - HINTS AND TIPS



WARNING!

Refer to Safety chapters.

#### 7.1 Cookware




For induction cooking zones a strong electro-magnetic field creates the heat in the cookware very quickly.

- · Minute Minder comes down
- Count Down Timer comes down
- you put something on the control panel.

# **6.13** Power management function

- Cooking zones are grouped according to the location and number of phases in the hob. See the illustration.
- Each phase has a maximum electricity load.
- The function divides the power between cooking zones connected to the same phase.
- The function activates when the total electricity load of the cooking zones connected to a single phase is exceeded.
- The function reduces the power of the other cooking zones connected to the same phase.
- The heat setting display of the reduced zones changes between two levels.

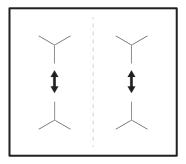



Use the induction cooking zones with suitable cookware.

#### Cookware material

 correct: cast iron, steel, enamelled steel, stainless steel, multi-layer bottom (with a correct marking from a manufacturer).  not correct: aluminium, copper, brass, glass, ceramic, porcelain.

# Cookware is suitable for an induction hob if:

- water boils very quickly on a zone set to the highest heat setting.
- a magnet pulls on to the bottom of the cookware.



The bottom of the cookware must be as thick and flat as possible.

Ensure pan bases are clean and dry before placing on the hob surface.

#### Cookware dimensions

Induction cooking zones adapt to the dimension of the bottom of the cookware automatically.

The cooking zone efficiency is related to the diameter of the cookware. The cookware with a diameter smaller than the minimum receives only a part of the power generated by the cooking zone.

# **7.2** Minimum cookware diameter

Cooking zone	Cook- ware di- ameter (mm)	Power (W)
Left rear	125 - 140	1400/2500
Right rear	145 - 180	1800/2800
Right front	145 - 180	1800/2800
Left front	180 - 210	2300/3600

# **7.3** The noises during operation If you can hear:

- crack noise: cookware is made of different materials (a sandwich construction).
- whistle sound: you use a cooking zone with a high power level and the cookware is made of different materials (a sandwich construction).
- humming: you use a high power level.
- clicking: electric switching occurs.
- hissing, buzzing: the fan operates.

The noises are normal and do not indicate any malfunction.

## 7.4 Öko Timer (Eco Timer)

To save energy, the heater of the cooking zone deactivates before the count down timer sounds. The difference in the operation time depends on the heat setting level and the length of the cooking operation.

# **7.5** Examples of cooking applications

The correlation between the heat setting of a zone and its consumption of power is not linear. When you increase the heat setting, it is not proportional to the increase of the consumption of power. It means that a cooking zone with the medium heat setting uses less than a half of its power.



The data in the table is for quidance only.

Heat setting	Use to:	Time (min)	Hints
<u>u</u> - 1	Keep cooked food warm.	as nec- essary	Put a lid on the cookware.
1 - 2.	Hollandaise sauce, melt: butter, chocolate, gelatine.	5 - 25	Mix from time to time.

Heat setting	Use to:	Time (min)	Hints
1 - 2.	Solidify: fluffy omelettes, baked eggs.	10 - 40	Cook with a lid on.
2 3.	Simmer rice and milkbased dishes, heat up ready-cooked meals.	25 - 50	Add at least twice as much liquid as rice, mix milk dishes halfway through the procedure.
3 4.	Steam vegetables, fish, meat.	20 - 45	Add a couple of tablespoons of liquid.
4 5.	Steam potatoes.	20 - 60	Use max. ¼ I of water for 750 g of potatoes.
4 5.	Cook larger quantities of food, stews and soups.	60 - 150	Up to 3 I of liquid plus ingredients.
5 7	Gentle fry: escalope, veal cordon bleu, cutlets, rissoles, sausages, liver, roux, eggs, pancakes, doughnuts.	as nec- essary	Turn halfway through.
7 - 8	Heavy fry, hash browns, loin steaks, steaks.	5 - 15	Turn halfway through.
9	Boil water, cook pasta, sear meat (goulash, pot roast), deep-fry chips.		
P	Boil large quantities of water. PowerBoost is activated.		

# 8. HOB - CARE AND CLEANING



#### **WARNING!**

Refer to Safety chapters.

### **8.1** General information

- · Clean the hob after each use.
- Always use cookware with a clean base
- Scratches or dark stains on the surface have no effect on how the hob operates.
- Use a special cleaner suitable for the surface of the hob.
- · Use a special scraper for the glass.

# 8.2 Cleaning the hob

 Remove immediately: melted plastic, plastic foil, sugar and food with sugar,

- otherwise, the dirt can cause damage to the hob. Take care to avoid burns. Use a special hob scraper on the glass surface at an acute angle and move the blade on the surface.
- Remove when the hob is sufficiently cool: limescale rings, water rings, fat stains, shiny metallic discoloration. Clean the hob with a moist cloth and a non-abrasive detergent. After cleaning, wipe the hob dry with a soft cloth.
- Remove shiny metallic discoloration: use a solution of water with vinegar and clean the glass surface with a cloth.

# 9. OVEN - DAILY USE



## **WARNING!**

Refer to Safety chapters.

# 9.1 Oven functions

Symbol	Oven function	Application
0	Off position	The oven is off.
	Conventional	To bake and roast food on one shelf position.
8	Circulated cooking	To roast or roast and bake food with the same cooking temperature on more than one shelf position, without flavour transference.
8	Hot Air	To bake on up to two shelf positions at the same time and to dry food. Set the temperature 20 - 40 °C lower than for Conventional.
(A)	Pie / Pizza	To bake food on one shelf position for a more intensive browning and a crispy bottom.
8	Drying	To dry sliced fruit, vegetables and mushrooms.
	Max Grill	To grill flat food in large quantities and to toast bread.
ङ्ग	Browning	To roast larger meat joints or poultry with bones on one shelf position. Also to make gratins and to brown.
<b>Y</b>	Moist Fan Baking	This function is designed to save energy during cooking. For the cooking instructions refer to "Hints and tips" chapter, Moist Fan Baking. The oven door should be closed during cooking so that the function is not interrupted and to ensure that the oven operates with the highest energy efficiency possible. When you use this function, the temperature in the cavity may differ from the set temperature. The heating power may be reduced. For general energy saving recommendations refer to "Energy Efficiency" chapter, Energy Saving. This function was used to comply with the energy efficiency class according to EN 60350-1. When you use this function the lamp automatically turns off.

Symbol	Oven function	Application
•	Function Lock	To lock oven functions.



You can defrost food by choosing Moist Fan Baking function without setting the temperature.

# **9.2** Activating and deactivating the oven



It depends on the model if your appliance has knob symbols, indicators or lamps:

- The indicator comes on when the oven heats up.
- The lamp comes on when the oven operates.
- The symbol shows whether the knob controls one of the cooking zones, the oven functions or the temperature.
- 1. Turn the knob for the oven functions to select an oven function.
- **2.** Turn the knob for the temperature to select a temperature.
- To deactivate the oven turn the knobs for the oven functions and temperature to the off position.

# **9.3** Locking the oven

The knob for the oven functions has a built-in Function lock.



The Function lock does not deactivate the main power supply of the cooker.

Turn the knob to the symbol 

The knob comes out approximately 2 mm.

The knob comes out approximately 2 mm.

**Unlocking the oven:** Press the knob and turn it to the necessary position.

## 9.4 Cooling fan

When the oven operates, the cooling fan turns on automatically to keep the

surfaces of the oven cool. If you turn off the oven, the cooling fan can continue to operate until the oven cools down.

# **9.5** Using the core temperature sensor

The core temperature sensor measures the core temperature of the meat.

There are two temperatures to be set:

- The oven temperature. Refer to the table for roasting.
- The core temperature. Refer to the table for the core temperature sensor.



#### CAUTION!

Only use the core temperature sensor supplied with the appliance, or genuine replacement parts.

- 1. Put the point of the core temperature sensor into the centre of the meat.
- 2. Put the plug of the core temperature sensor into the socket on the front of the appliance. The indicator for the core temperature sensor flashes.

3. Press the button + or - to set the core temperature.

You can set the temperature from 30 °C to 99 °C. Refer to values in the table.

- **4.** Set the oven function and the oven temperature.
- Press a button to stop the signal. An acoustic signal sounds for two minutes, when the meat is at the set core temperature.
- **6.** Deactivate the appliance.
- Remove the plug of the core temperature sensor from the socket. Remove the meat from the appliance.

If the meat is not cooked to your satisfaction, do the above steps again and set a higher core temperature.

You can change the temperature at any time during the cooking. Press to change the set core temperature.




#### WARNING!

Be careful when you remove the tip and plug of the core temperature sensor. The core temperature sensor is hot. There is a risk of burns.

# **9.6** Inserting the oven accessories


#### Deep pan:

Push the deep pan between the guide bars of the shelf support.

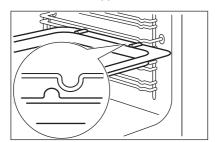

### Wire shelf and the deep pan together:

Push the deep pan between the guide bars of the shelf support and the wire shelf on the guide bars above.

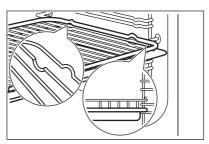



- All accessories have small indentations at the top of the right and left side to increase safety.
   The indentations are also anti-tip devices.
- The high rim around the shelf is a device which prevents cookware from slipping.

# 10. OVEN - CLOCK FUNCTIONS

## 10.1 Display



- A. Clock functions
- B. Timer
- C. Food sensor indicator

### 10.2 Buttons

Button	Function	Description
_	MINUS	To set the time.
<b>ℬ</b>	CLOCK	To set a clock function.
+	PLUS	To set the time.

## 10.3 Clock functions

Clock function		Application
•	TIME OF DAY	To set, change or check the time of day.
→	DURATION	To set how long the oven works.
Φ	MINUTE MINDER	To set a countdown. This function has no effect on the operation of the oven. You can set this function at any time, also when the oven is off.

# 10.4 Setting the DURATION

- **1.** Set an oven function and temperature.
- 2. Press <sup>𝒯</sup> again and again until → starts to flash.
- 3. Press + or to set the DURATION time.

The display shows →

- When the time ends, → flashes and an acoustic signal sounds. The appliance deactivates automatically.
- **5.** Press any button to stop the acoustic signal.

Turn the knob for the oven functions and the knob for the temperature to the off position.

# **10.5** Setting the MINUTE MINDER

- Press <sup>®</sup> again and again until △ starts to flash.
- 2. Press + or to set the necessary time.

The Minute Minder starts automatically after 5 seconds.

- When the set time ends, an acoustic signal sounds. Press any button to stop the acoustic signal.
- Turn the knob for the oven functions and the knob for the temperature to the off position.

# **10.6** Cancelling the clock functions

 Press the again and again until the necessary function indicator starts to flash. 2. Press and hold —.

The clock function goes out after some seconds.

# 11. OVEN - HINTS AND TIPS



#### **WARNING!**

Refer to Safety chapters.



The temperature and baking times in the tables are guidelines only. They depend on the recipes and the quality and quantity of the ingredients used.

## **11.1** Baking

For the first baking, use the lower temperature.

You can extend the baking time by 10 – 15 minutes if you bake cakes on more than one shelf position.

Cakes and pastries at different heights do not always brown equally. There is no need to change the temperature setting if an unequal browning occurs. The differences equalize during baking.

Trays in the oven can distort during baking. When the trays are cold again, the distortions disappear.

# 11.2 Tips on baking

Baking results	Possible cause	Remedy
The bottom of the cake is not baked sufficiently.	The shelf position is incorrect.	Put the cake on a lower shelf.
The cake sinks and becomes soggy or	The oven temperature is too high.	Next time set slightly lower oven temperature.
streaky.	The oven temperature is too high and the baking time is too short.	Next time set a longer baking time and lower oven temperature.
The cake is too dry.	The oven temperature is too low.	Next time set higher oven temperature.
	The baking time is too long.	Next time set shorter baking time.

Baking results	Possible cause	Remedy
The cake bakes unevenly.	The oven temperature is too high and the baking time is too short.	Next time set a longer baking time and lower oven temperature.
	The cake batter is not evenly distributed.	Next time spread the cake batter evenly on the baking tray.
The cake is not ready in the baking time specified in a recipe.	The oven temperature is too low.	Next time set a slightly higher oven temperature.

# 11.3 Hot Air Baking 🕲

Food	Temperature (°C)	Time (min)	Shelf posi- tion
Bread rolls	175 - 185	15 - 20	2 + 4
Wholemeal rolls	165 - 180	20 - 30	2 + 4
Filled sandwiches	170 - 180	15 - 20	2 + 4
Pan loaf	170 - 190	30 - 40	1 + 4
Pretzels	160 - 170	15 - 20	2 + 4
White loaf / Round loaf	170 - 180	35 - 45	2 + 4
Wholemeal loaf	160 - 170	35 - 45	2 + 4
Rye bread, mix	250	-	2 + 4
- baking	160 - 170	60 - 70	2 + 4
Baguettes	180 - 200	20 - 30	2 + 4
Pancake	150 - 160	50 - 60	3
Fruit cakes	140 - 150	70 - 80	3
Muffins	160 - 170	15 - 25	2 + 4
Jam roll	190 - 210	6 - 15	3
Buns	185 - 195	8 - 15	2 + 4
Long loaf	170 - 180	25 - 35	2 + 4
Gingerbread	160 - 170	8 - 15	2 + 4
Dish cake	150 - 160	30 - 40	2 + 4
Sponge cakes / Madeira cakes	150 - 160	50 - 60	2
Meringues	100	90 - 120	2 + 4
Meringue bases	100	90 - 120	2 + 4
Biscuits	150 - 160	10 - 20	2 + 4

Food	Temperature (°C)	Time (min)	Shelf posi- tion
Choux pastry	155 - 165	30 - 40	2 + 4
Fruit tarts, short crust pastry	150 - 160	pre-baking, bases 10 - 15	2 + 4
Fruit tarts, short crust pastry	150 - 160	finishing 35 - 45	2 + 4
Fruit tarts, crumble pastry	170 - 180	30 - 40	2 + 4

# 11.4 Hot Air Cooking

Food	Temperature (°C)	Time (min)	Shelf po- sition
Fish, boiling	150 - 160	_1)	2 + 4
Fish, frying	165 - 175	_ 1)	2 + 4
Meatloaf	165 - 175	60 - 70	2 + 4
Danish meatballs	165 - 175	35 - 45	2 + 4
Liver pâté	165 - 175	65 - 75	2 + 4
Potato gratin	175	55 - 65	2 + 4
Lasagne, home made	175	60 - 70	2 + 4
Lasagne, frozen	175	30 - 45 <b>2)</b>	2 + 4
Pasta gratin	165 - 175	40 - 50	2 + 4
Pizza, home made	180 - 200	20 - 35	3
Pizza, frozen	180 - 200	15 - 25 <b>2)</b>	2 + 4
Chips, frozen	180 - 200	30 - 45 <b>2)</b>	2 + 4
Tarts, home made - pre-baking, roll	165 - 175	15 - 20	2 + 4
Tarts, home made - finishing	165 - 175	30 - 40	2 + 4
Tarts, frozen	175	25 - 35 <b>2</b> )	2 + 4

<sup>1)</sup> When frying or boiling fish, the cooking time depends on the thickness of the fish. The fish is finished when the flesh is white. Test by sticking a fork into the fish. If the flesh comes easily away from the bone, the fish is cooked.

<sup>2)</sup> With cooking on two levels (double portion) the time is around 1/3 longer than that stated on the packaging. If the time given is 30 mins, then the preparation time will be around 30 + 10 = 40 min.

# **11.5** Conventional Baking $\square$

Food	Temperature (°C)	Time (min)	Shelf position
Bread rolls	200 - 225	8 - 12	3 - 4
Wholemeal rolls	190 - 200	20 - 25	3 - 4
Filled sandwiches	200 - 225	10 - 12	3 - 4
Ciabatta rolls	210 - 230	10 - 20	3 - 4
Foccacia	220 - 230	15 - 20	3 - 4
Pita bread	250	5 - 15	3 - 4
Pretzels	180 - 200	12 - 15	3 - 4
White loaf	190 - 210	25 - 40	1 - 2
Ciabatta	210 - 220	15 - 25	1 - 2
Wholemeal loaf	180 - 200	35 - 45	1 - 2
Rye bread, mix	275	-	1
- baking	190	55 - 65	1
Baguettes	220 - 230	15 - 30	3 - 4
Pancake	170 - 180	50 - 60	2 - 3
Dish cake	170 - 180	35 - 45	3 - 4
Sponge cakes / Madeira cakes	170 - 180	40 - 50	1 - 2
Sandwich cake, roll	200 - 225	8 - 12	3 - 4
Meringues	100	90 - 120	3 - 4
Meringue bases	100	90 - 120	3 - 4
Biscuits	160 - 180	6 - 15	3 - 4
Choux pastry	170 - 190	30 - 45	3 - 4
Swiss rolls	190 - 210	10 - 12	3 - 4
Fruit tarts, short crust pastry	175 - 200	pre-baking, roll 10 - 15	3 - 4
Fruit tarts, short crust pastry	175	finishing 35 - 45	3 - 4
Fruit tarts, crumble pastry	190 - 200	25 - 35	3 - 4
Marzipan ring cake	210 - 230	10 - 12	2

# **11.6** Conventional Cooking

Food	Temperature (°C)	Time (min)	Shelf po- sition
Fish, boiling	160 - 170	_1)	2 - 3
Fish, frying	180 - 200	_1)	2 - 3
Meatloaf	175 - 200	45 - 60	2 - 3
Danish meatballs	175 - 200	30 - 45	3 - 4
Liver pâté	180 - 200	50 - 60	2 - 3
Gratin	180 - 200	50 - 60	2 - 3
Potato gratin	200	55 - 65	3 - 4
Lasagne, home made	200	50 - 60	2 - 3
Lasagne, frozen	175 - 200	30 - 45 <b>2)</b>	3 - 4
Pasta gratin	180 - 200	30 - 40	2 - 3
Pizza, home made	220 - 230	15 - 25	2 - 3
Pizza, frozen	220 - 230	15 - 25 <b>2</b> )	2 - 3
Chips, frozen	225 - 250	20 - 30 <b>2)</b>	3 - 4
Tarts, home made - pre-baking, roll	190 - 210	15 - 25	3 - 4
Tarts, home made - finishing	190 - 210	20 - 30	3 - 4
Tarts, frozen	200 - 225	20 - 30 <b>2)</b>	3 - 4

<sup>1)</sup> When frying or boiling fish, the cooking time depends on the thickness of the fish. The fish is finished when the flesh is white. Test by sticking a fork into the fish. If the flesh comes easily away from the bone, the fish is cooked.

# 11.7 Pizza Table

Food	Temperature (°C)	Time (min)	Shelf posi- tion
Ciabatta rolls	200 - 220	10 - 20	2 - 3
Foccacia	220 - 230	10 - 20	2 - 3
Ciabatta	190 - 200	15 - 25	2 - 3
Fruit tarts, short crust pastry	170 - 180	35 - 45	2 - 3
Fruit tarts, crumble pastry	175 - 200	25 - 35	2 - 3

<sup>2)</sup> With cooking on two levels (double portion) the time is around 1/3 longer than that stated on the packaging. If the time given is 30 min, then the preparation time will be around 30 + 10 = 40 min.

Food	Temperature (°C)	Time (min)	Shelf posi- tion
Pizza, home made (thick - with a lot of topping)	180 - 200	25 - 35	1 - 2
Pizza, home made (thin crust)	200 - 2301)	15 - 20	1 - 2
Pizza, frozen	200	15 - 20	1 - 2
Tarts, home made pre-baking, roll	175 - 200	35 - 45	3 - 4
Tarts, home made finishing	175 - 200	35 - 45	3 - 4
Tarts, frozen	200	15 - 25	3 - 4

<sup>1)</sup> Preheat the oven.

# 11.8 Moist Fan Baking 🖾

# Bread and pizza

Food	Temperature (°C)	Time (min)	Shelf posi- tion
Buns	180	25 - 35	3
Frozen pizza 350 g	190	25 - 35	3

# Cakes in baking tray

Food	Temperature (°C)	Time (min)	Shelf posi- tion
Swiss roll	180	20 - 30	3
Brownie	180	30 - 40	3

## Cakes in tin

Food	Temperature (°C)	Time (min)	Shelf posi- tion
Soufflè	200	30 - 40	3
Sponge flan base	180	20 - 30	3
Victoria sandwich	150	25 - 35	3

## Fish

Food	Temperature (°C)	Time (min)	Shelf posi- tion
Fish in pouches 300 g	180	25 - 35	3
Whole fish 200 g	180	25 - 35	3
Fish fillet 300 g	180	25 - 35	3

### Meat

Food	Temperature (°C)	Time (min)	Shelf posi- tion
Meat in pouch 250 g	200	25 - 35	3
Meat skewers 500 g	200	30 - 40	3

## Small baked items

Food	Temperature (°C)	Time (min)	Shelf posi- tion
Cookies	180	25 - 35	3
Macaroons	160	25 - 35	3
Muffins	180	25 - 35	3
Savoury cracker	170	20 - 30	3
Short crust pastry biscuits	150	25 - 35	3
Tartelettes	170	15 - 25	3

# Vegetarian

Food	Temperature (°C)	Time (min)	Shelf posi- tion
Mixed vegetables in pouch 400 g	180	25 - 35	3
Omelette	200	20 - 30	3
Vegetables on tray 700 g	180	25 - 35	3

# 11.9 Circulated Baking 🖫

Food	Temperature (°C)	Time (min)	Shelf posi- tion
Bread rolls	175 - 185	15 - 25	2 + 4
Wholemeal rolls	165 - 180	20 - 30	2 + 4
Filled sandwiches	170 - 180	15 - 25	2 + 4
Pretzels	160 - 170	15 - 20	2 + 4
White loaf	170 - 180	30 - 40	2 + 4
Wholemeal loaf	160 - 170	35 - 45	2 + 4
Rye bread, mix	250	heating	2 + 4
- baking	160 - 170	60 - 70	2 + 4
Baguettes	180 - 200	20 - 30	2 + 4
Pancake	150 - 160	50 - 60	3

Food	Temperature (°C)	Time (min)	Shelf posi- tion
Dish cake	150 - 160	30 - 40	2 + 4
Sponge cakes / Madeira cakes	150 - 160	50 - 60	2
Meringues	100	90 - 120	2 + 4
Meringue bases	100	90 - 120	2 + 4
- heating	with oven turned off	25	2 + 4
Biscuits	150 - 160	10 - 20	2 + 4
Choux pastry	155 - 165	30 - 40	2 + 4
Fruit tarts, short crust pastry	150 - 160	pre-baking, roll 10 - 15	2 + 4
Fruit tarts, short crust pastry	150 - 160	finishing 35 - 45	2 + 4
Fruit tart, crumble pastry	170 - 180	30 - 40	2 + 4

# 11.10 Tips on Roasting

Use heat-resistant ovenware.

Roast lean meat covered (you can use aluminium foil).

Roast large meat joints directly in the tray or on the wire shelf placed above the tray.

Put some water in the tray to prevent dripping fat from burning.

Turn the roast after 1/2 - 2/3 of the cooking time.

Roast meat and fish in large pieces (1 kg or more).

Baste meat joints with their own juice several times during roasting.

# 11.11 Hot Air Roasting ®

#### Beef

Food	Temperature (°C)	Time (min / kg)	Shelf po- sition
Roast beef <sup>1)</sup>	125	80 - 120	2 - 3
Rump steak - browning	200	total 10	2 - 3
Rump steak - roasting	150	50 - 60	2 - 3
Roast beef	160	90 - 120	1 - 2

<sup>1)</sup> Other. Can be browned off after roasting under the grill or with top / bottom heat at 250°C. If you are using a meat probe, remove it before grilling.

#### Veal

Food	Temperature (°C)	Time (min / kg)	Shelf po- sition
Fillet of beef <sup>1)</sup>	160	60 - 70	2 - 3

<sup>1)</sup> Other. Can be browned off after roasting under the grill or with top / bottom heat at 250°C. If you are using a meat probe, remove it before grilling.

#### Lamb

Food	Temperature (°C)	Time (min / kg)	Shelf po- sition
Leg / shoulder / saddle	160	80 - 100	2

#### **Pork**

Food	Temperature (°C)	Time (min / kg)	Shelf po- sition
Roast pork <sup>1)</sup>	175	60 - 70	2 - 3
Pork loin <sup>1)</sup>	175	60	2 - 3
Neck fillets	160	90 - 120	2 - 3
Ham	150	60 - 100	1 - 2

 $<sup>\</sup>overline{\mbox{1)}_{\mbox{Other.}}}$  Can be browned off after roasting under the grill or with top / bottom heat at 250°C. If you are using a meat probe, remove it before grilling.

#### **Poultry**

Food	Temperature (°C)	Time (min / kg)	Shelf position
Chicken, parted	180	55 - 65	2 - 3
Duck <sup>1)</sup>	150	55 - 65	2 - 3
Duck slow roasting <sup>1)</sup>	130	total around 5 hours	2 - 3
Roast turkey, stuffed	150	50 - 60	1 - 2
Turkey breast	175	70 - 80	2 - 3

<sup>1)</sup> Other. Can be browned off after roasting under the grill or with top / bottom heat at 250°C. If you are using a meat probe, remove it before grilling.

# **11.12** Conventional Roasting

#### **Beef**

Food	Temperature (°C)	Time (min / kg)	Shelf position
Roast beef <sup>1)</sup>	125	80 - 120	2 - 3

Food	Temperature (°C)	Time (min / kg)	Shelf posi- tion
Rump steak - browning	225	total 10	2 - 3
Rump steak - roasting	160	50 - 60	2 - 3
Roast beef	180	90 - 120	1 - 3

<sup>1)</sup> Other. Can be browned off after roasting under the grill or with top / bottom heat at 250°C. If you are using a meat probe, remove it before grilling.

### Veal

Food	Temperature (°C)	Time (min / kg)	Shelf position
Fillet of beef <sup>1)</sup>	180	60 - 70	2 - 3

<sup>1)</sup> Other. Can be browned off after roasting under the grill or with top / bottom heat at 250°C. If you are using a meat probe, remove it before grilling.

#### Lamb

Food	Temperature (°C)	Time (min / kg)	Shelf position
Leg / shoulder / rib	180	80 - 100	2

#### **Pork**

Food	Temperature (°C)	Time (min / kg)	Shelf posi- tion
Roast pork <sup>1)</sup>	200	60 - 70	3
Pork loin <sup>1)</sup>	200	60	3
Neck fillets	180	90 - 120	2 - 3
Ham	160	60 - 100	1 - 2

<sup>1)</sup> Other. Can be browned off after roasting under the grill or with top / bottom heat at  $250^{\circ}$ C. If you are using a meat probe, remove it before grilling.

## **Poultry**

Food	Temperature (°C)	Time (min / kg)	Shelf position
Chicken, parted	200	55 - 65	2 - 3
Duck <sup>1)</sup>	160	55 - 65	2 - 3
Duck slow roasting <sup>1)</sup>	130	total around 5 hours	2 - 3
Roast turkey, stuffed	160	50 - 60	1 - 2

Food	Temperature	Time (min /	Shelf posi-
	(°C)	kg)	tion
Turkey breast	200	70 - 80	2 - 3

<sup>1)</sup> Other. Can be browned off after roasting under the grill or with top / bottom heat at 250°C. If you are using a meat probe, remove it before grilling.

## 11.13 Core temperature sensor table

#### **Beef**

Food	Food core temperature (°C)	Shelf position
Roast beef	55 - 65	2 - 3
Rump steak - browning	55 - 65	2 - 3
Rump steak - roasting	55 - 65	2 - 3
Roast beef	75 - 80	1 - 2

#### Veal

Food	Food core temperature (°C)	Shelf position
Fillet of beef	65	2 - 3

#### Lamb

Food	Food core tempera- ture (°C)	Shelf position
Leg / shoulder / saddle	90	2

### Pork

Food	Food core temperature (°C)	Shelf position
Roast pork	80	2 - 3
Neck fillets	75 - 80	2 - 3
Ham	70 - 75	1 - 2

### **Poultry**

Food	Food core temperature (°C)	Shelf position
Turkey breast	75 - 80	2 - 3

# **11.14** Grilling in general

 


#### WARNING!

Always grill with the oven door closed.

- Always grill with the maximum temperature setting.
- Set the shelf into the shelf position as recommended in the grilling table.
- Always set the deep pan to collect the fat into the first shelf position.

· Grill only flat pieces of meat or fish.



The grilling area is set in centre of the shelf.

# 11.15 Fast Grilling

Food	Temperature (°C)	Time (min)		Shelf po-
		1st side	2nd side	- sition
Burgers	max 1)	9 - 15	8 - 13	4
Pork fillet	max	10 - 12	6 - 10	4
Sausages	max	10 - 12	6 - 8	4
Fillet steaks, veal steaks	max	7 - 10	6 - 8	4
Toast	max 1)	1 - 4	1 - 4	4 - 5
Toast with topping	max	6 - 8	-	4

<sup>1)</sup> Pre-heat the oven

# **11.16** Drying **∑**

Cover the oven shelves with baking parchment.

For best results: deactivate the appliance after half the time required. Open the

appliance door and let the appliance cool down. After that finish the drying process.

### Vegetables

Food	Temperature (°C)		Shelf position	
		Time (h)	1 posi- tion	2 posi- tions
Beans	60 - 70	6 - 8	3	2/4
Peppers	60 - 70	5 - 6	3	2/4
Vegetables for sour	60 - 70	5 - 6	3	2/4
Mushrooms	50 - 60	6 - 8	3	2/4
Herbs	40 - 50	2 - 3	3	2 / 4

#### Fruit

Food	Temperature (°C)		Shelf position	
		Time (h)	1 posi- tion	2 posi- tions
Plums	60 - 70	8 - 10	3	2 / 4
Apricots	60 - 70	8 - 10	3	2 / 4
Apple slices	60 - 70	6 - 8	3	2 / 4
Pears	60 - 70	6 - 9	3	2/4

# 12. OVFN - CARE AND CLEANING



#### WARNING!

Refer to Safety chapters.

## **12.1** Notes on cleaning



Clean the front of the oven with a soft cloth with warm water and a mild detergent.

Use a cleaning solution to clean metal surfaces.

Cleaning Agents

Clean stains with a mild detergent. Do not apply it on the catalytic surfaces.



Use

Clean the cavity after each use. Fat accumulation or other residue may cause fire.

Do not store the food in the oven for longer than 20 minutes. Dry the cavity with a soft cloth after each use.



Clean all accessories after each use and let them dry. Use a soft cloth with warm water and a mild detergent. Do not clean the accessories in a dishwasher.

Do not clean the non-stick accessories using abrasive cleaner or Accessories sharp-edged objects.

## 12.2 Stainless steel or aluminium ovens

Clean the oven door with a damp cloth or sponge only. Dry it with a soft cloth.

Do not use steel wool, acids or abrasive materials as they can damage the oven surface. Clean the oven control panel with the same precautions.

# 12.3 Catalytic cleaning



#### CAUTION!

Do not clean the catalytic surface with oven sprays, soap or other cleaning agents. It will damage the catalytic surface.



#### **CAUTION!**

Always turn the oven light on while using the catalytic cleaning (if applicable).



#### **WARNING!**

Keep children away when you clean the oven at a high temperature. The oven surface becomes very hot and there is a risk of burns.



Spots or discolouration of the catalytic surface have no effect on catalytic properties.



Before activating the catalytic cleaning remove all the accessories from the oven.

The walls with catalytic coating are selfcleaning. They absorb fat which collects on the walls while the appliance operates.


To support the self-cleaning procedure, heat the empty oven on a regular basis.

- 1. Clean the oven floor with warm water and washing-up liquid, then dry it.
- 2. Set the oven temperature to 250 °C and let the oven operate for 1 hour.
- **3.** When the appliance is cool, clean it with a soft and moist sponge.


# **12.4** Removing the shelf supports

To clean the oven, remove the shelf supports.

**1.** Pull the front of the shelf support away from the side wall.

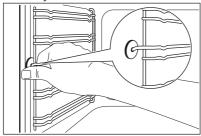

2. Pull the rear end of the shelf support away from the side wall and remove it.

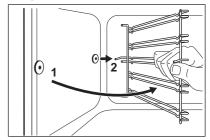

Install the shelf supports in the opposite sequence.




#### **CAUTION!**

Make sure that the longer fixing wire is in the front. The ends of the two wires must point to the rear. Incorrect installation can cause damage to the enamel.

# 12.5 Removing the oven door

To make the cleaning easier, remove the door.

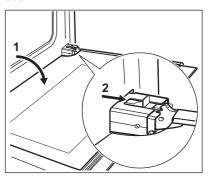

- **1.** Open the door fully.
- 2. Move the slider until you hear a click.
- 3. Close the door until the slider locks.
- Remove the door.
   To remove the door, pull the door outwards first from one side, and then the other.


When the cleaning procedure is completed, insert the oven door in the opposite sequence. Make sure that you hear a click when you insert the door. Use force if necessary.

# **12.6** Removing and cleaning the door glasses




 The door glass in your product can be different in type and shape from the examples you see in the images. The number of glasses can also be different

1. Hold the door trim B on the top edge of the door at the two sides and push inwards to release the clip seal.



 - 2. Pull the door trim to the front to remove it.
- Hold the door glass panels on their top edge one by one and pull them upwards from the guide.



**4.** Clean the door glass panels. To install panels, do the same steps in reverse.

## 12.7 Replacing the lamp



#### WARNING

Risk of electric shock. The lamp can be hot.

- 1. Turn off the oven. Wait until the oven is cold.
- 2. Disconnect the oven from the mains.
- **3.** Put a cloth on the bottom of the cavity.

# The back lamp




The lamp glass cover is at the back of the cavity.

- 1. Turn the lamp glass cover counterclockwise to remove it.
- 2. Clean the glass cover.
- 3. Replace the oven lamp with a suitable 300 °C heat-resistant oven lamp.
- Use the same oven lamp type.
- 4. Install the glass cover.

# The side lamp

Find the lamp glass cover at the left side of the cavity.

- 1. Remove the left shelf support to get access to the lamp.
- 2. Use a narrow, blunt object (e.g. a teaspoon) to remove the glass cover.

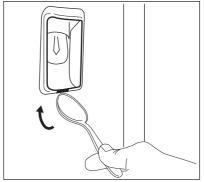

- 3. Clean the glass cover.
- **4.** Replace the lamp with a suitable 300 °C heat-resistant lamp.
- 5. Install the glass cover.
- 6. Install the left shelf support.

## **12.8** Removing the drawer



### WARNING!

Do not keep flammable items (such as cleaning materials, plastic bags, oven gloves, paper or cleaning sprays) in the drawer. When you use the oven, the drawer can become hot. There is a risk of fire

The drawer below the oven can be removed for cleaning.

- 1. Pull the drawer out until it stops.
- Lift the drawer slightly, so that can be lifted upwards at an angle of the drawer guides.

To install the drawer, follow the procedure in reverse.

# 13. TROUBLESHOOTING



#### WARNING!

Refer to Safety chapters.

## **13.1** What to do if...

Problem	Possible cause	Remedy
You cannot activate the appliance.	The appliance is not connected to an electrical supply or it is connected incorrectly.	Check if the appliance is correctly connected to the electrical supply.
You cannot activate the appliance.	The fuse is blown.	Make sure that the fuse is the cause of the malfunc- tion. If the fuse is blown again and again, contact a qualified electrician.
You cannot activate or operate the hob.	You touched 2 or more sensor fields at the same time.	Touch only one sensor field.
You cannot activate or operate the hob.	There is water or fat stains on the control panel.	Clean the control panel.
An acoustic signal sounds and the hob deactivates. An acoustic signal sounds when the hob is deactivated.	You put something on one or more sensor fields.	Remove the object from the sensor fields.
Residual heat indicator does not come on.	The zone is not hot be- cause it operated only for a short time.	If the zone operated suffi- ciently long to be hot, speak to an Authorised Service Centre.
Automatic Heat Up function does not operate.	The zone is hot.	Let the zone become sufficiently cool.
Automatic Heat Up function does not operate.	The highest heat setting is set.	The highest heat setting has the same power as the function.
The heat setting changes between two levels.	Power management function operates.	Refer to "Hob - Daily use" chapter.

Problem	Possible cause	Remedy
The sensor fields become hot.	The cookware is too large or you put it too near to the controls.	Put large cookware on the rear zones if possible.
There is no signal when you touch the panel sensor fields.	The signals are deactivated.	Activate the signals. Refer to "Hob - Daily use" chapter.
comes on the hob display.	Automatic Switch Off operates.	Deactivate the hob and activate it again.
comes on the hob display.	The Child Safety Device or the Lock function operates.	Refer to "Hob - Daily use" chapter.
© comes on the hob display.	There is no cookware on the zone.	Put cookware on the zone.
F comes on the hob display.	The cookware is incorrect.	Use the correct cookware. Refer to "Hob - Hints and tips" chapter.
F comes on the hob display.	The diameter of the bottom of the cookware is too small for the zone.	Use cookware with correct dimensions. Refer to "Hob - Hints and tips" chapter.
The oven does not heat up.	The oven is deactivated.	Activate the oven.
The oven does not heat up.	The clock is not set.	Set the clock.
The oven does not heat up.	The necessary settings are not set.	Make sure that the settings are correct.
The lamp does not operate.	The lamp is defective.	Replace the lamp.
The display shows "12.00".	There was a power cut.	Reset the clock.
The display shows F11.	The plug of the core temperature sensor is not correctly installed into the socket.	Put the plug of the core temperature sensor as far as possible into the socket.
Steam and condensation settle on the food and in the cavity of the oven.	You left the dish in the oven for too long.	Do not leave the dishes in the oven for longer than 15 - 20 minutes after the cooking process ends.

## 13.2 Service data

If you cannot find a solution to the problem yourself, contact your dealer or an Authorised Service Centre.

The necessary data for the service centre is on the rating plate. The rating plate is on the front frame of the oven cavity. Do not remove the rating plate from the oven cavity.

We recommend that you write the data here:			
Model (MOD.)			
Product number (PNC)			
Serial number (S.N.)			

# 14. ENERGY EFFICIENCY

# 14.1 Product information for hob according to EU 66/2014

Model identification	EKI7553BTW EKI7553BTX	
Type of hob	Hob inside Freestanding Cooker	
Number of cooking zones	4	
Heating technology	Induction	
Diameter of circular cooking zones ( $\emptyset$ )	Left front Left rear Right front Right rear	21.0 cm 14.0 cm 18.0 cm 18.0 cm
Energy consumption per cooking zone (EC electric cooking)	Left front Left rear Right front Right rear	171.4 Wh/kg 176.4 Wh/kg 171.2 Wh/kg 166.2 Wh/kg
Energy consumption of the h	ob (EC electric hob)	171.3 Wh/kg

EN 60350-2 - Household electric cooking appliances - Part 2: Hobs - Methods for measuring performance.

# 14.2 Hob - Energy saving

You can save energy during everyday cooking if you follow below hints.

When you heat up water, use only the amount you need.

- If it is possible, always put the lids on the cookware.
- Before you activate the cooking zone put the cookware on it.
- Put the smaller cookware on the smaller cooking zones.
- Put the cookware directly in the centre of the cooking zone.
- Use the residual heat to keep the food warm or to melt it.

## 14.3 Product information for ovens and Product Information Sheet\*

Supplier's name	Electrolux
Model identification	EKI7553BTW EKI7553BTX
Energy Efficiency Index	95.3
Energy efficiency class	A

Energy consumption with a standard load, conventional mode	0.95 kWh/cycle
Energy consumption with a standard load, fan- forced mode	0.82 kWh/cycle
Number of cavities	1
Heat source	Electricity
Volume	73
Type of oven	Oven inside Freestanding Cooker
Mass	EKI7553BTW 65.2 kg
IVIASS	EKI7553BTX 65.2 kg

 $<sup>^{\</sup>ast}$  For European Union according to EU Regulations 65/2014 and 66/2014. For Republic of Belarus according to STB 2478-2017, Appendix G; STB 2477-2017, Annexes A and B.

For Ukraine according to 568/32020.

Energy efficiency class is not applicable for Russia.

EN 60350-1 - Household electric cooking appliances - Part 1: Ranges, ovens, steam ovens and grills - Methods for measuring performance.

## 14.4 Oven - Energy saving



The oven has features which help you save energy during everyday cooking.

Make sure that the oven door is closed when the oven operates. Do not open the oven door too often during cooking. Keep the door gasket clean and make sure it is well fixed in its position.

Use metal cookware to improve energy saving.

When possible, do not preheat the oven before cooking.

Keep breaks between baking as short as possible when you prepare a few dishes at one time.

#### Cooking with fan

When possible, use the cooking functions with fan to save energy.

#### Residual heat

When the cooking duration is longer than 30 min, reduce the oven temperature to minimum 3 - 10 min before the end of cooking. The residual heat inside the oven will continue to cook.

Use the residual heat to warm up other dishes.

#### Keep food warm

Choose the lowest possible temperature setting to use residual heat and keep a meal warm

#### Moist Fan Baking

Function designed to save energy during cooking.

# 15. ENVIRONMENTAL CONCERNS

Recycle materials with the symbol  $\circlearrowleft$ . Put the packaging in relevant containers to recycle it. Help protect the environment and human health by recycling waste of electrical and electronic appliances. Do not dispose of

appliances marked with the symbol with the household waste. Return the product to your local recycling facility or contact your municipal office.



867338796-A-142020

**(**E