

LOGIK

End User Service Manual

Integrated Fridge
LUL82I24E



Contents

Safety Warnings.....3

Tools Required4

Replacing the Door Hinges5

Replacing the Trays (Shelves)6

Replacing the Door Gasket (Seal)7

Safety Warnings

GENERAL SAFETY INSTRUCTIONS

- For your continued safety and to reduce the risk of injury or electric shock, please follow all the safety precautions listed below.
- Following any repair by a non-authorised service provider, self-repair or non-professional repair of the product, Currys is not liable for any damage to the product, any injury or any other product safety issue caused by any attempt to repair the product which does not carefully follow repair and maintenance instructions. Any damage to the product or property caused by an attempt to repair the product by any person other than a certified service provider will not be covered by the warranty.

BEFORE SERVICING

- Make sure to disconnect the power plug, disconnect water inlet before servicing.
- Ensure any water spillage is cleaned up to avoid slipping hazard.
- When removing the power cord, make sure to hold the power plug when pulling the plug from the outlet. Do not use wet hands.
- Ensure extensions leads are not used.
- At least two people should work when working with heavy products.
- Although every care has been taken to ensure this appliance has no burrs or sharp edges, we recommend that you wear protective gloves when installing and moving this appliance.
- The unit must be manoeuvred by a minimum of 2 persons.
- Do not operate your appliance unless all enclosure panels are properly in place.

WHILE SERVICING

- Check if the power plug and outlet are damaged, flattened, cut or otherwise degraded. If faulty, replace it immediately. Failing to do so may result in electric shock or fire.
- If you need to place the unit on its back for servicing purposes, place a support(s) on the floor and lay it down carefully so its side is on the floor. Do not lay it down on its front.
- Completely remove any dust or foreign material from the housing, wiring and connection parts. This will prevent a risk of fire due to tracking and shorts in advance.
- When connecting wires, make sure to connect them using the relevant connectors and check that they are properly connected.

AFTER SERVICING

- Check the wiring. Ensure that the wiring cannot be damaged by any sharp edges or moving parts.
- Check for any water leakage. For washing machines and dishwashers using the standard program, check whether there is any water leakage. Some leaks may be slow to take a while to spot.

Tools Required

Some or all of these tools may be required.

Flat Screwdriver	
Posidrive / Philips screwdriver	
Hex Allen key	
Spirit Level	
Torx driver	
Pliers	
PPE	

Replacing the Door Hinges

Check if it is difficult to open or close the door, or whether the door is falling down or misaligned with other doors and cabinet. If so, there might be a problem with the hinge. Follow procedures below to check and rework.
General method to disassemble the door and bottom hinge. The method is suitable for fridge door and freezer door.

-
1. Remove the hinge cover.



-
2. Unscrew 4 bolts and remove the hinge and replace the new one.



Replacing the Trays (Shelves)

Check if the shelves are scratched or broken, please follow below step to replace.

1. Lift the shelves.



2. Take out the shelves.



3. Replace the new one.



4. Fix the shelves.




Replacing the Door Gasket (Seal)

Check if gasket is cracked or deformed. General method to replace gasket.

-
1. Pull gasket out from corner.



2. Install a new gasket, starting from the corner.
Make sure base of gasket is pressed into trough completely.

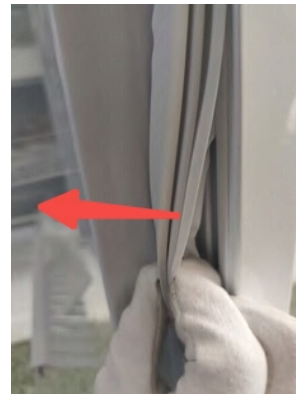

3. Make sure gasket is properly aligned with edges of trough.



4. Close the door, make sure gasket is well attached.



